

Product description and use

Groomer

The groomer is designed for regular and frequent care that is friendly to your lawn. While the reels mow the lawn horizontally, the groomer cuts the grass vertically. It shortens horizontally growing grass blades and removes thatch from the lawn. As a result, the grass is stimulated to grow further upwards. Regular usage of the groomer cartridge therefore helps you achieve an evenly growing, dense, and homogeneous lawn. Thanks to its narrow blades fitted close to each other, the use of the groomer is very lawn-friendly and differs significantly from verticutting.

As grooming is a gentle and lawn-friendly procedure, you can use the groomer every week. The knives of the groomer should only slightly touch the soil of the lawn - the depth should be between 0 and 1 mm. The groomer should operate at maximum machine speed. For Edwin, you can increase the power using the throttle lever on the handlebar, whereas for Electra, switch on the regeneration mode.

The groomer's blades are subject to normal wear and tear and can be replaced with new ones after excessive wear or loss of original function.

Technical specifications:

Groomer

Model: 45 and 55 cm

Working width: 450 and 550 mm

Number of blades: 34 and 42

Maximum construction working depth: 2 and 2 mm

Maximum permissible working depth: 1 and 1 mm



Swardman, s.r.o., Šardice 862, 696 13 Šardice, Czech Republic